

1. Turn off gate valve for separating pump and pipe



2. Turn off the connection between rotary pump and turbo pump



3. Turn off rotary pump and turbo pump (step1-3 was done also for other vacuum segment)



4. Turn off air drier



5. Turn off air compressor, turn off connection between the air compressor and others and turn off power supply to this air compressor from a black power supply box.

